


## COMPETITION/PLUS® **4-SPEED SHIFTER**

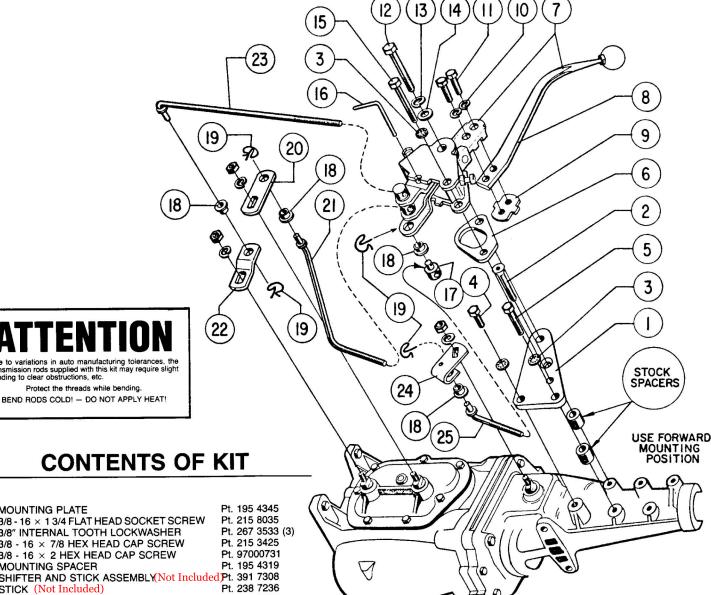

## **CONTENTS OF KIT**

1.	MOUNT	ING PLATE	Pt.	195 4345	
2.	3/8 - 16	× 13/4 FLAT HEAD SOCKET SCREW	Pt.	215 8035	
3.	3/8" INT	ERNAL TOOTH LOCKWASHER	Pt.	267 3533	(3)
4.	3/8 - 16	× 7/8 HEX HEAD CAP SCREW	Pt.	215 3425	
5.	3/8 - 16	× 2 HEX HEAD CAP SCREW	Pt.	97000731	
		ING SPACER	Pt.	195 4319	
7.	SHIFTE	R AND STICK ASSEMBLY(Not Included	Pt.	391 7308	
		(Not Included)	Pt.	238 7236	
9.	RETAIN	IER PLATE (Not Included)	Pt.	195 0053	
10.	3/8" SP	LIT LOCKWASHER			(2)
11.	3/8 - 24	× 1 1/4 HEX HEAD CAP SCREW			(2)
12.	7/16 - 2	0 × 3 HEX HEAD CAP SCREW		215 3423	
13.	7/16" S	PLIT LOCKWASHER		97000404	
		LATWASHER		96000561	
15.	. 3/8 - 24	× 3 HEX HEAD CAP SCREW		215 4371	
16.	NEUTR	AL ALIGNMENT PIN		148 1725	
17.	. ROD AI	DJUSTING BUTTON		119 3783	
18.	BUSHIN	NG		118 1681	
19.	. SPRING	G CLIP		97000015	
20.	. ARM	1-2		105 4346	
21.	. ROD	1-2		213 4348	
22	. ARM	3-4		105 2441	
23	. ROD	3-4		213 1588	
24	. ARM	REVERSE		105 4347	
25	. ROD	REVERSE	Pt.	213 2487	

## WARNING

THIS TRANSMISSION DOES NOT HAVE AN INTERLOCK TO PREVENT ENGAGEMENT OF THE REVERSE GEAR WHEN ANY OF THE FORWARD GEARS ARE ENGAGED. SEVERE DAMAGE TO THE TRANSMISSION WILL RESULT IF THIS SHOULD OCCUR. DOUBLE-CHECK THE LINKAGE BEFORE STARTING THE ENGINE OR MOVING THE CAR. INSERT NEUTRAL ALIGNMENT PIN (PL. 1725) THROUGH LEVERS AND CHECK POSITIONS OF TRANSMISSION SHIFTING ARMS. 1-2. AND 3-4 TRANSMISSION CONTROL ARMS MUST BE AT NEUTRAL POSITIONS OF THEIR TRAVEL. REVERSE GEAR CONTROL ARM MUST BE AT FORWARD END OF ITS TRAVEL (DIS-ENGAGED). OF ITS TRAVEL (DIS-ENGAGED)